

## **Fixed Dock Installation Diagram**

Front mount fixed dock Installation

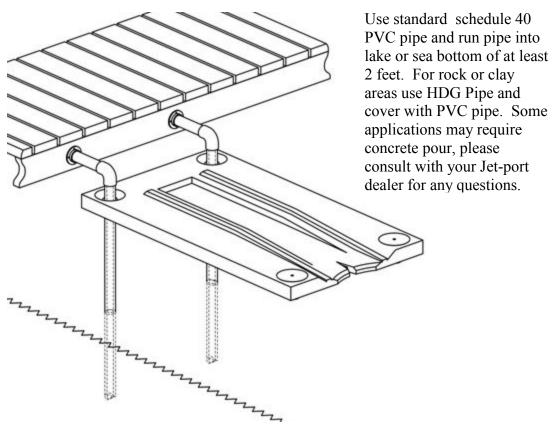

Side mount fixed dock Installation with 4" External Pine Holder Kit

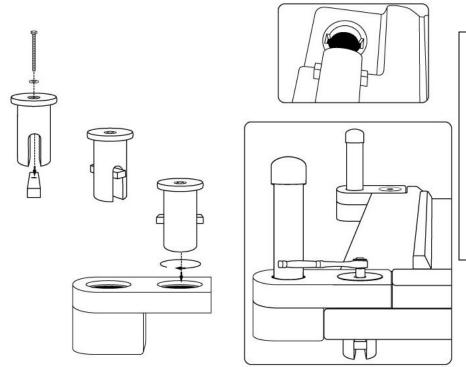

\* Socket Wrench should fit ½" hex Bolt. Run pipe through Pipe Holder kit into lake or sea bottom of at least 2 feet. For rock or clay areas use HDG Pipe and cover with PVC pipe. Some applications may require concrete pour, please consult with your Jetport dealer for any questions